


SP、SY cable plug assembling instruction screw-2

1、Strip length

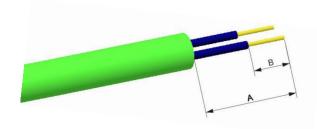

Series	A(mm)	B(mm)
SP21/SY21/SP25/SY25	22	6
SP29/SY29	22	6


2. Put the stripped cable through all parts



3. Put the stripped wire into contact holes and wrap hwith eat shrinkable tube after tighten the screws.




4. Tighten the backshell and the main part clockwise according to the below torque

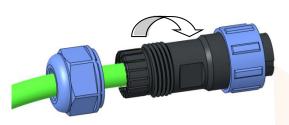

Series	Torque (N.M)
SP21/SY21/SP25/SY25	1.0-1.1
SP29/SY29	1.5-1.6

5. Tighten the compression nut and backshell clockwise according to the below torque

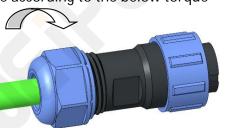

Series	Torque (N.M)	
SP21/SY21/SP25/SY25	1.0-1.1	
SP29/SY29	2.5-2.6	