



WY24KLCZZ LC square flange socket assembling instruction

①

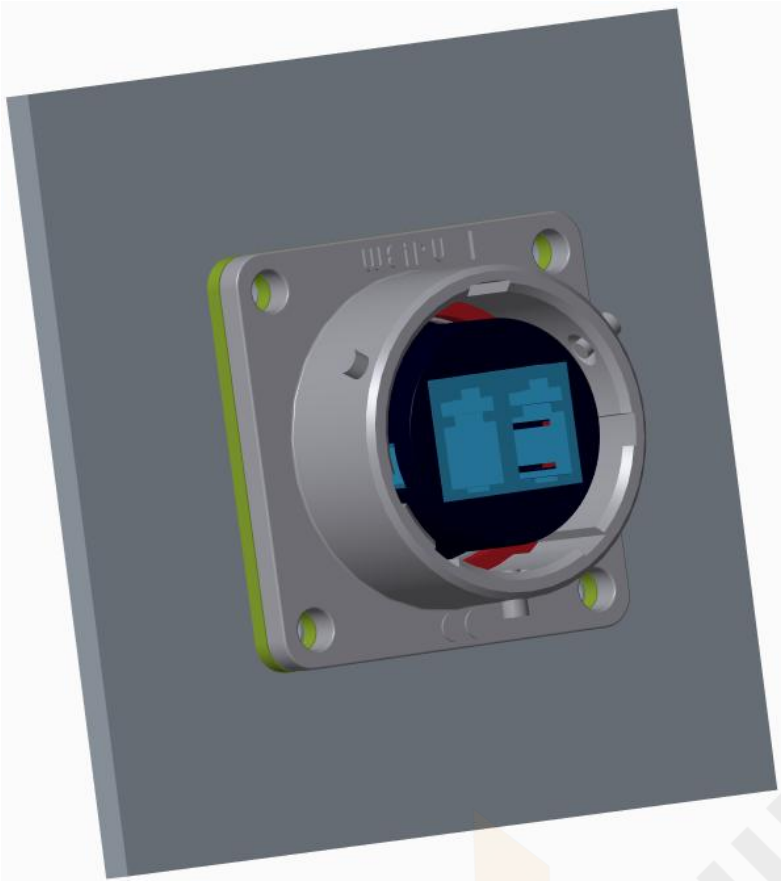

mount the WY24KLCZZ socket on the panel

②

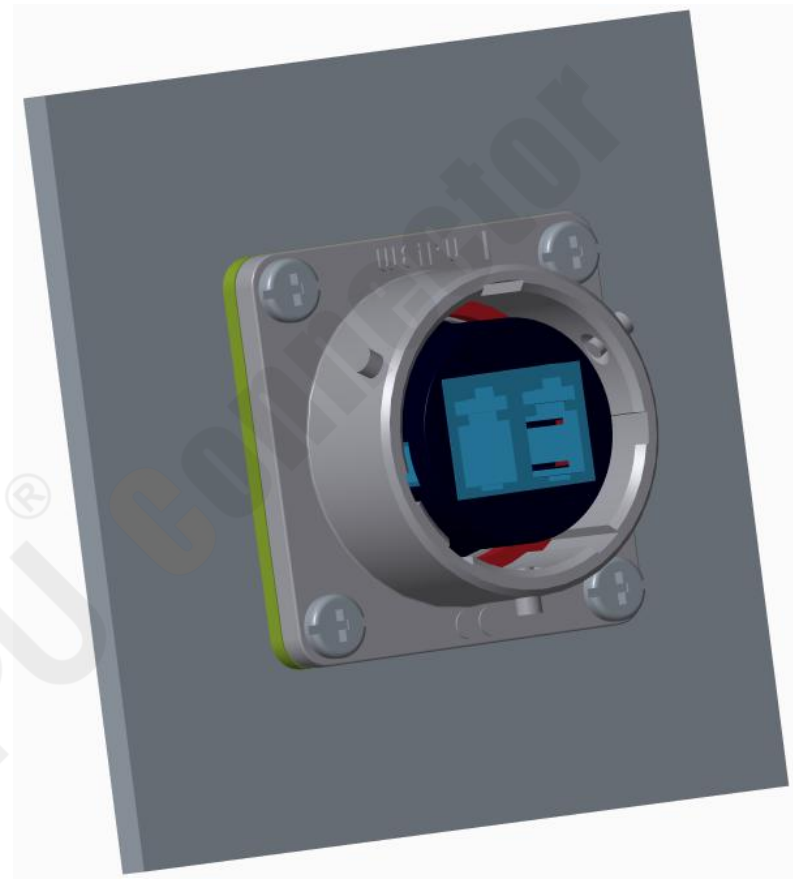

Mount and tighten the M3×13screws.
Torque:0.2-0.25N.m



mate the plug & socket as shown above
Torque: 0.3-1.0N.m