



1

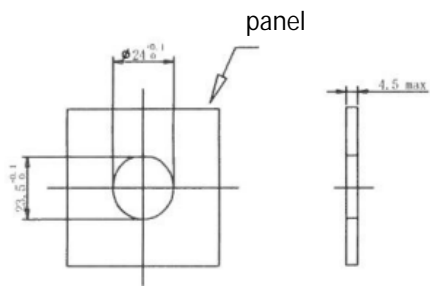


1. Drill the panel cuout according to dimensions.
(max panel thickness:4.5mm)

2

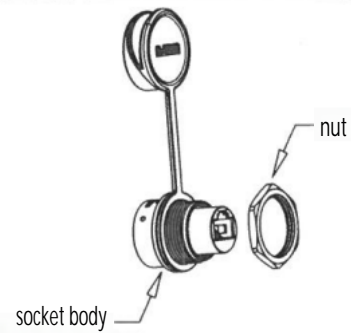

2. Unscrew the rear-nut

3

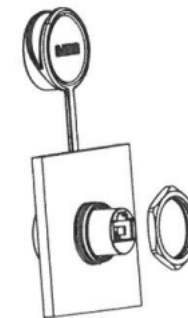


3. Put the socket into the panel and tighten the nut with torque 1.0-1.2N.m.

4



4. Assemble the RJ45 insert on cable

5

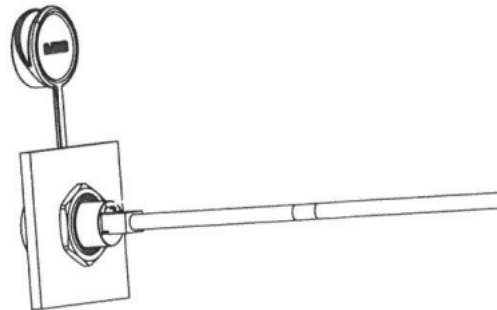

5. Install the assembled RJ45 itto socket body