




1. Insert the crimped male pins into the core Z, first install the middle hole and tighten the core Z, then buckle the outer pins into the core holes.

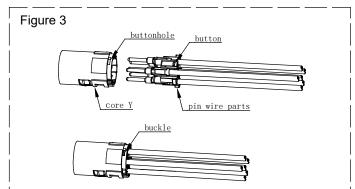

1. Align the core Z and install it into the core Y. Note that the button and buttonhole must be aligned. After installation, the button should be able to buckle the core without separation.

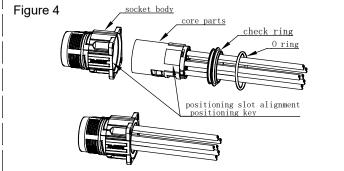

1. Align the positioning key of the core parts component with the positioning slot in the inner hole of the socket body, then press it in. After that, use a check ring to press into the socket body for fixing the core parts. Finally, install the 0 ring into the 0 slot as shown above.

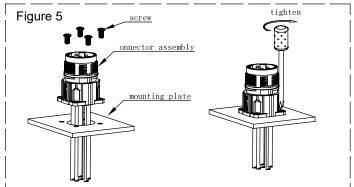

1. Fix the assembled connector assembly to the mounting plate, then tighten the screw.

[2. The specifications of the mounting plate are detailed in the catalogue.]

