



2. Insert the crimped female pin into the Insert Part. Ensure that the


pin is pressed in correctly and can be lightly buckled into place.

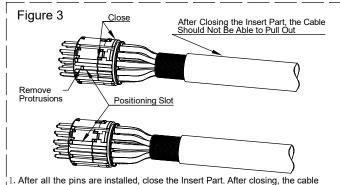


- After all the pins are installed, close the Insert Part. After closing, the cable should not be able to pull out
- \mid 2. Remove the protrusions in the positioning slot, ensuring to only remove the protrusions from the slot that will be used.

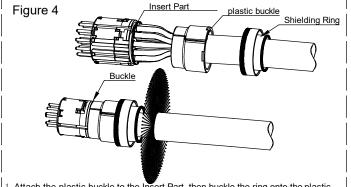

- 1. Attach the plastic buckle to the Insert Part, then buckle the ring onto the plastic buckle $_{\circ}$
- $\mid 2.$ Organize the shielding wire as shown above $_{\circ}$

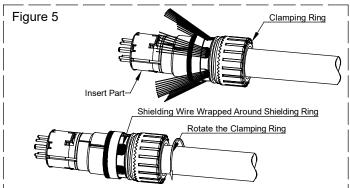

- 1. Use the clamping ring to divide the shielding wire into 4-6 groups, then secure the clamping ring onto the shielding ring。
- 2. Rotate the clamping ring to wrap the shielding wire around the shielding ring.

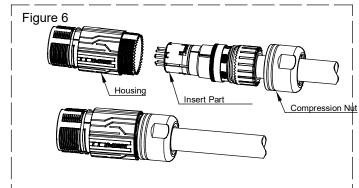

- 1. Align the Insert&Cable Part and install them into the Housing,then tighten with the compression nut using a torque of 4-6N.
- 2. The final installation will be as shown in the diagram above.