SY2512-USB rear-nut mount panel socket assembling instruction

1. Unscrew the rear-nut

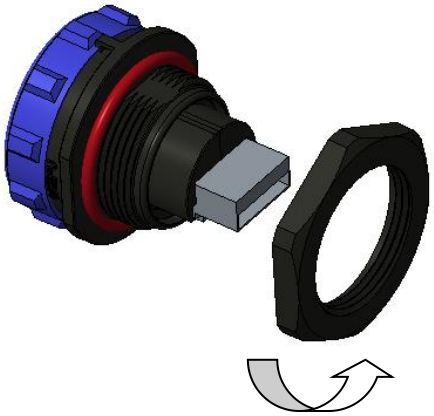

2. Put the socket into the panel.
(max panel thickness:3mm)

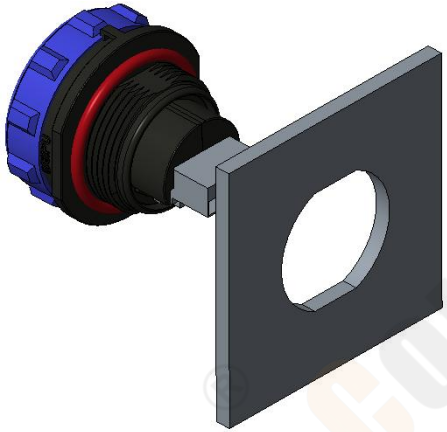

Panel cutout

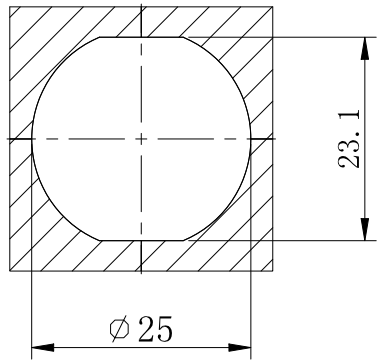

3. Tighten the rear-nut according to torque of 1-1.1N.m

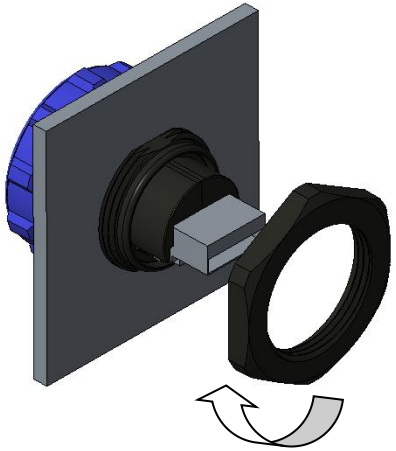
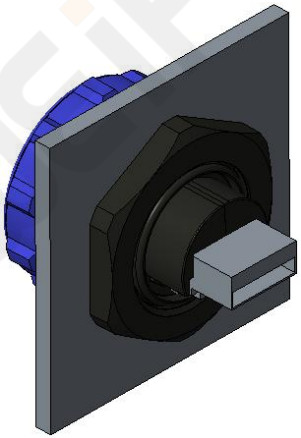
4. Assembling finished.