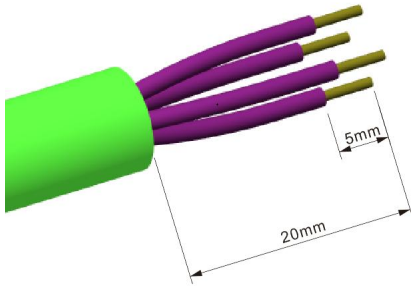

① Strip length

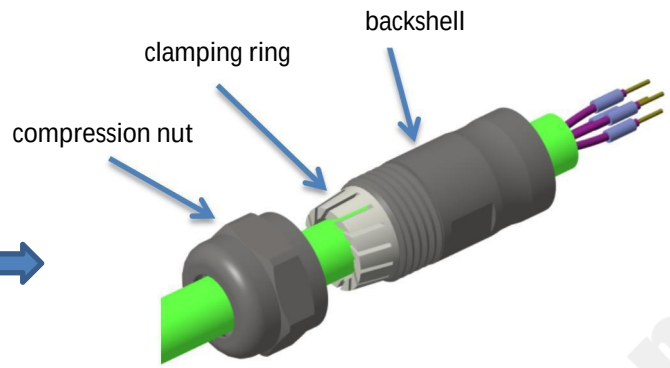

② Put the stripped cable through all parts

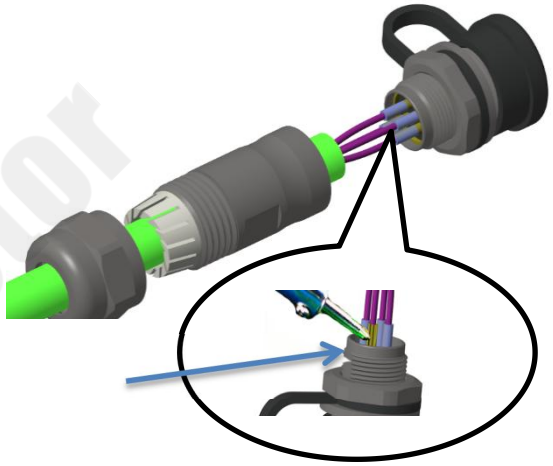

③ Solder the wire to the contact and wrap with heat shrinkable tube after soldering.

④ Tighten the backshell and the main part clockwise according to torque of 0.9-1.0N.m

⑤Tighten the compression nut and the backshell clockwise according to torque of 0.9-1.1N.m